

Winkelschrauber
Screwdriver
AW 10 - 400 UA
29900 34 6

MANNESMANN
DEMAG

Nr. No.	BENENNUNG	DESCRIPTION	Lager-Nr. Stock-No.	Stk. QTY.
1	Gehäuse	Housing	29918 49 6	1
2	Mutter	Nut	29918 50 6	1
3	O-Ring	O-Ring	29918 51 6	1
4	Ring	Ring	29915 50 6	1
5	Kugellager	Bearing	29916 76 6	1
6	Feder	Spring	29918 52 6	1
7	Distanzring	Spacer	29918 53 6	1
8	Nadellager	Needle roller bearing	29918 54 6	2
9	Antriebswelle	Bevel gear compl.	29918 55 6	1
10	Mutter	Nut	29918 56 6	1
11	Winkelkopf	Angle head	29918 57 6	1
12	Nadellager	Needle roller bearing	29918 58 6	1
13	Kugellager	Bearing	29916 76 6	1
14	Mutter	Nut	29918 59 6	1
15	Sicherungsring	Circlip	29916 94 6	1
16	Mutter	Nut	29918 60 6	1
17	Regler	Clutch regulation	29916 83 6	1
18	Feder	Spring	29918 61 6	1
19	Sicherungsring	Circlip	29916 93 6	1
20	Feder	Spring	29916 95 6	1
21	Hülse	Bush	29916 97 6	1
22	Mitnehmer	Fixed clutch	29804 03 3	1
23	Kugel	Ball	29916 99 6	3
24	Mitnehmer	Fixed clutch	29804 04 3	1
25	Kupplungswelle	Clutch shaft	29918 62 6	1
26	Kugel	Ball	29916 87 6	4
27	Stift	Pin	29916 98 6	3
28	Kugel	Ball	29916 87 6	14
29	Kupplung	Clutch	29918 63 6	1
30	Scheibe	Clutch spacer	29918 64 6	1
31	Sicherungsring	Circlip	29918 65 6	1
32	Kugellager	Bearing	29918 66 6	2
33	Nadelhülse	Needle cage	29917 22 6	3
34	Planetenrad	Gear wheel	29918 67 6	3
35	Stift	Pin	29918 68 6	3
36	Planetenradträger	Planet shaft	29918 69 6	1
37	Feder	Spacer	29918 70 6	1
38	Lagernadel	Bearing needle	29916 71 6	3
39	Planetenrad	Gear wheel	29918 71 6	3
40	Planetenradträger kompl.	Planet shaft compl.	29918 72 6	1
41	Kugellager	Bearing	29918 73 6	1
42	Sicherungsring	Circlip	29918 74 6	1
43	Schalldämpfer	Silencer	29918 75 6	1
44	Gehäuse kpl.	Tube compl.	29918 76 6	1

Nr. No.	BENENNUNG	DESCRIPTION	Lager-Nr. Stock-No.	Stk. QTY.
45	Hülse	Cursor	29918 77 6	1
46	Kugellager	Bearing	29916 59 6	1
47	Lagerschild, hinten	Cylinder upper plate	29918 78 6	1
48	Lamelle	Vane	29918 79 6	5
49	Rotor	Rotor	29918 80 6	1
50	Stift	Pin	29916 54 6	1
51	Zylinder	Cylinder	29918 81 6	1
52	Lagerschild, vorn	Cylinder lower plate	29918 82 6	1
53	Kugellager	Bearing	29918 83 6	1
54	Feder	Spring	29918 84 6	1
55	Mutter	Nut	29918 85 6	1
56	Deckel	Cover	29918 86 6	1
57	O-Ring	O-Ring	29918 87 6	1
58	Dämpfring	Filter ring	29918 88 6	3
59	Schalldämpfer	Silencer	29918 89 6	3
60	Siebträger	Connector	29918 90 6	1
61	Schalldämpfer	Filter	29916 47 6	1
62	Feder	Spring	29918 91 6	1
63	Ventil	Valve	29918 92 6	1
64	Buchse	Bushing	29918 93 6	1
65	Distanzring	Spacer	29918 94 6	1
66	Schalldämpfer	Silencer	29918 95 6	1
67	Filter	Filter ring	29918 96 6	2
68	Hebel	Lever	29918 97 6	1
69	Stift	Pin	29918 98 6	1
70	Ventilgehäuse	Control top	29918 99 6	1
71	Stift	Pin	29916 54 6	1
72	Ventil kpl.	Valve compl.	29919 00 6	1
73	O-Ring	O-Ring	29919 01 6	1
74	Feder	Spring	29919 02 6	1
75	Hülse	Spacer	29919 03 6	1
76	O-Ring	O-Ring	29916 53 6	1
77	Kugel	Ball	29916 56 6	1
78	Feder	Spring	29916 57 6	1
79	Lufteinlaßstück	Distributor	29916 55 6	1
80	Steuerknopf	Inverter button	29916 51 6	1
81	Schraube	Screw	29919 04 6	1

AW 10 - 400 UA

29900 34 6

